

Beechcraft T-34 Mentor Exterior Kit PAGE 1 of 3

NOTE: Modifications and changes to accomodate your specific aircraft will be made at <u>NO EXTRA CHARGE</u>. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065

RHS-I	RHS-I	LW-I	LW-I	RW-I	RW-I	RF-I	RF-I	LF-I	LF-I	EXT
RHS-2	RHS-2	LW-2	LW-2	RW-2	RW-2	RF-2	RF-2	LF-2	LF-2	POWER
		LW-3	LW-3	RW-3	RW-3	RF-3	RF-3	LF-3	LF-3	24
LHS-I	LHS-I	LW-3	LW-3			RF-4	RF-4	LF-4	LF-4	
LHS-2	LHS-2	LW-4	LW-4	RW-4	RW-4	RF-5	RF-5	LF-5	LF-5	VOLTS
LVS-I	LVS-I	LW-5	LW-5	RW-5	RW-5	RF-6	RF-6	LF-6	LF-6	20 U A
LVS-2	LVS-2	LW-6	LW-6	RW-6	RW-6	RF-7	RF-7	LF-7	LF-7	GROUND
LW-II	LW-II	LW-7	LW-7	RW -7	RW-7	RF-8	RF-8	LF-8	LF-8	
		1.W.O	LW-8	RW-8	RW-8	RF-9	RF-9	LF-9	LF-9	HERE
LW-12	LW-12	LW-8	LW-8			RF-IO	RF-IO	LF-IO	LF-IO	VERV
RW-II	RW-II	LW-9	LW-9	RW-9	RW-9	RW-12	RW-12 RF-3A		-3A	OIL
		LW-IO	LW-10	RW-IO	RW-10	RW-I3	RW-I	3 RF	-3A	DRAIN

STATIC OPENING DO NOT COVER DO NOT COVER STATIC LINE LEVEL LEVEL PULL PULL DRAIN OIL BRAKE FLUID 12 US QT. RESERVOIR 100 LL AVGAS ONLY	OIL DRAIN STEP CANOPY OPEN PITOT LINE EMERGENCY DRAIN
OIL INSIDE COWL STALL WARNING FUEL VENT FUEL VENT FUEL TRANSMITTER NO PUSH FUEL TRANSMITTER NO PUSH DISENGAGE GUST LOCK BEFORE TOWING	JACK POINT BATTERY COMPARTMENT
TIE TIE TIE FUEL BOOST PUMP	JACK POINT BATTERY JACK POINT COMPARTMENT
BATTERY DRAIN BATTERY VENT	FUEL STRAINER BAGGAGE COMPARTMENT MENTOR MENTOR
BATTERY DRAIN JAR	FIRE EXTINGUISHER INSIDE MENTOR MENTOR

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065



Beechcraft T-34 Mentor Exterior Kit PAGE 2 of 3

NOTE: Modifications and changes to accomodate your specific aircraft will be made at NO EXTRA CHARGE. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 Fax: 1-970-461-2065 www.aerographics.com

CAUTION: DISCONNECT ELECTRICAL WIRING AND PLUMBING BEFORE REMOVING WING

CAUTION: DISCONNECT ELECTRICAL WIRING AND PLUMBING BEFORE REMOVING WING

KEEP CLEAN KEEP CLEAN KEEP CLEAN KEEP CLEAN KEEP CLEAN

RF-9 RF-9 25 US GALLONS **ACCESS** 25 US GALLONS FOR FIRE RF-9 RF-9 25 US GALLONS **EXTINGUISHING**

KEEP CLEAN

HOIST HOIST HOIST HOIST

TIE DOWN TIE DOWN TIE DOWN

NO NO NO NO STEP STEP STEP STEP

TIRE PRESSURE 40 PSI

TIRE PRESSURE 40 PSI

TIRE PRESSURE 35 PSI

TIRE PRESSURE 35 PSI

NO PUSH NO PUSH NO PUSH

NO PUSH NO PUSH NO PUSH

NO PUSH NO PUSH NO PUSH

NO PUSH NO PUSH NO PUSH HOIST

BATTERY DRAIN HOIST HOIST HOIST LEVEL POINT

25 US GALLONS

BRAKE FLUID RESERVOIR LEVEL POINT CANOPY RELEASE EMERGENCY PULL

BATTERY LOCATION BATTERY LOCATION RIGHT SIDE FOWARD RIGHT SIDE FOWARD OF WINDSHIELD OF WINDSHIELD

BATTERY LOCATION BATTERY LOCATION RIGHT SIDE FOWARD RIGHT SIDE FOWARD OF WINDSHIELD OF WINDSHIELD

BATTERY LOCATION BATTERY LOCATION RIGHT SIDE FOWARD RIGHT SIDE FOWARD OF WINDSHIELD OF WINDSHIELD

BATTERY LOCATION BATTERY LOCATION RIGHT SIDE FOWARD RIGHT SIDE FOWARD OF WINDSHIELD OF WINDSHIELD

Fax: 1-970-461-2065

딢

ONLY ONLY

FUEL FUEL FIEL

FIEL

Phone: 1-800-336-9633

www.aerographics.com



Beechcraft T-34 Mentor Exterior Kit PAGE 3 of 3


NOTE: Modifications and changes to accomodate your specific aircraft will be made at NO EXTRA CHARGE.

Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065



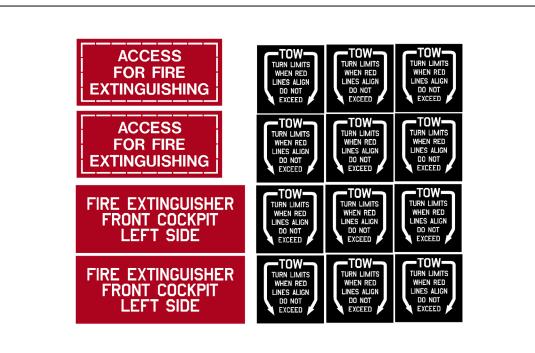

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065