

AeroGraphics

The Original Aircraft Lettering Company



Cessna 425-441 Exterior Kit PAGE 1 of 1

NOTE: Modifications and changes to accommodate your specific aircraft will be made at **NO EXTRA CHARGE**.
Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065

APPLY EXTRA FORCE IN EMERGENCY TO OVERCOME INTERNAL HANDLE NORMAL PRESSURE	NO STEP	NO STEP
MAIN GEAR FILLING/SERVICE SEE P.O.H.	SECURE PRIOR TO FLIGHT	NO STEP
MAIN GEAR FILLING/SERVICE SEE P.O.H.	SECURE PRIOR TO FLIGHT	NO PUSH
NOSE GEAR FILLING/SERVICE SEE P.O.H.	SECURE PRIOR TO FLIGHT	NO PUSH
OIL FILL ACCESS	SECURE PRIOR TO FLIGHT	NO PUSH
▶PUSH JACK PAD	STATIC SOURCE KEEP CLEAN	NO PUSH
JACK PAD JACK PAD	STATIC SOURCE KEEP CLEAN	NO PUSH
A/C HYDRAULIC	STATIC VENTS KEEP CLEAR	STATIC VENTS KEEP CLEAR
E.L.T. HERE	STATIC VENTS KEEP CLEAR	STATIC VENTS KEEP CLEAR
ENGINE OIL CAPACITY 9.2 QUARTS SEE MANUAL FOR APPROVED OILS. ENTER OIL BRAND AND TYPE IN ENGINE LOG BOOK DO NOT MIX BRANDS	ENGINE OIL CAPACITY 9.2 QUARTS SEE MANUAL FOR APPROVED OILS. ENTER OIL BRAND AND TYPE IN ENGINE LOG BOOK DO NOT MIX BRANDS	
ENGINE OIL CAPACITY 7.5 QUARTS SEE MANUAL FOR APPROVED OILS. ENTER OIL BRAND AND TYPE IN ENGINE LOG BOOK DO NOT MIX BRANDS	ENGINE OIL CAPACITY 7.5 QUARTS SEE MANUAL FOR APPROVED OILS. ENTER OIL BRAND AND TYPE IN ENGINE LOG BOOK DO NOT MIX BRANDS	

EMERGENCY EXIT

OPEN

DOOR OPERATION TO OPEN PUSH BUTTON ROTATE HANDLE TO CLOSE ROTATE HANDLE

FUEL VALVE

OXYGEN FILLER AVIATORS BREATHING OXYGEN PER MIL - 0 - 27210 SEE SERVICE MANUAL FOR SERVICE INSTRUCTIONS	GROUND POINT	TANK & SUMP DRAINS
EXTERNAL POWER 28 VOLTS DC NOMINAL 800 AMPS STARTING CAPACITY MIN DO NOT EXCEED 1700 AMPS	GROUND POINT	TANK & SUMP DRAINS
TORQUE AFT ATTACH BOLTS 50/70 INCH POUNDS	GROUND POINT	TANK & SUMP DRAINS
TORQUE FWD ATTACH NUTS 480/690 INCH POUNDS	LEVEL POINT	TANK & SUMP DRAINS
	LEVEL POINT	TANK & SUMP DRAINS
	FLUX VALVE	TANK & SUMP DRAINS

UNLOCK **LOCK**
BEFORE TAXI AND FLIGHT

TURN **LIMITS**
DISENGAGE RUDDER & CONTROL LOCKS BEFORE GROUND HANDLING

EXTERNAL HYD RESERVOIR FILL MIL - H - 5606

183 US GAL USABLE	ANTH-ICE ADDITIVE REQUIRED	SEE FLIGHT MANUAL FOR TYPES OF FUEL QUALITY OF ADDITIVE AND FUELING PROCEDURES	JET FUEL ONLY	▶
237 US GAL USABLE	ANTH-ICE ADDITIVE REQUIRED	SEE FLIGHT MANUAL FOR TYPES OF FUEL QUALITY OF ADDITIVE AND FUELING PROCEDURES	JET FUEL ONLY	▶

CROSSFEED LINE DRAIN DAILY

PITOT DO NOT OBSTRUCT

TORQUE BOLTS TO 60/70 IN LBS SAFETY WIRE BOLTS IN PAIRS

UNLOCK **LOCK**
BEFORE TAXI AND FLIGHT

STATIC SOURCE KEEP CLEAN

LOCKED LOCKED LOCATOR BEACON

E.L.T. HERE E.L.T. HERE

EMERGENCY EXIT

OPEN

APPLY EXTRA FORCE IN EMERGENCY TO OVERCOME INTERNAL HANDLE NORMAL PRESSURE

UNLOCK **LOCK**
BEFORE TAXI AND FLIGHT

TURN **LIMITS**
DISENGAGE RUDDER & CONTROL LOCKS BEFORE GROUND HANDLING

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065