

# Piper PA-60 Aerostar Exterior Kit **PAGE 1 of 1**

NOTE: Modifications and changes to accomodate your specific aircraft will be made at NO EXTRA CHARGE. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 Fax: 1-970-461-2065 www.aerographics.com

DO NOT PUSH

NO STEP

DO NOT PUSH

NO

DO NOT PUSH

STEP

DO NOT PUSH

**FUSELAGE** FUEL TANK COMPARTMENT

DO NOT PUSH

OIL CAPACITY

DO NOT PUSH

12 QUARTS

OIL CAPACITY 12 QUARTS

BRAKE FLUID RESERVOIR SERVICE WITH MIL-H-5606 FLUID TO BLEED BRAKES, SEE PITOT/STATIC

MAINTENANCE MANUAL

LINE DRAINS PITOT/STATIC LINE DRAINS

LEFT WING FUEL SUMP PUSH TO DRAIN



RIGHT WING FUEL SUMP PUSH TO DRAIN

FUSELAGE FUEL SUMP PUSH TO DRAIN

### AVGAS ONLY

100-130 AVIATION GRADE MINIMUM DO NOT ADD FUEL TO WING TANKS UNLESS FUSELAGE TANK IS FULL **EACH WING TOTAL USABLE FUEL** 

62 U.S. GAL DO NOT INSERT NOZZLE OVER 3 INCHES

## AVGAS ONLY

100-130 AVIATION GRADE MINIMUM DO NOT ADD FUEL TO WING TANKS UNLESS FUSELAGE TANK IS FULL EACH WING TOTAL USABLE FUEL

62 U.S. GAL DO NOT INSERT NOZZLE OVER 3 INCHES

### AVGAS ONLY

100-130 AVIATION GRADE MINIMUM AUX TANK TOTAL USABLE FUEL 44 U.S. GAL

LEVEL POINT LEVEL POINT

JACK PAD JACK PAD JACK PAD

PUSH TO OPEN **PUSH** 

FUEL VENT PUSH TO OPEN

CAUTION

O NOT PULL ON D
CRITICAL DAMAGE
R LINKAGE CAN F

AVGAS ONLY
100-130 AVIATION GRADE MINIMUM
FUSELAGE TANK TOTAL USABLE FUEL

5

24 VOLT DC

BATTERY MASTER, RADIO MASTER AND ALTERNATOR SWITCHES MUST BE OFF BEFORE INSERTING AUXILARY POWER SUPPLY PLUG

HYDRAULIC FLUID SERVICE WITH MIL-H-5606 HYDRAULIC FLUID ONLY. CHECK FLUID LEVEL WITH SYSTEM BELOW 325 PSI

MAIN GEAR FILLING/SERVICE SEE P.O.H. MAIN GEAR

FORWARD COMPARTMENT NOT

FILLING/SERVICE SEE P.O.H.

APPROVED FOR BAGGAGE E.L.T.

NOSE GEAR FILLING/SERVICE SEE P.O.H.

LOCATED BEHIND PANEL

EXTERNAL POWER 24 VOLTS DC

80 POUNDS MAXIMUM BAGGAGE AND OR AUXILIARY SEAT PASSENGER FOR ADDITIONAL LOADING INSTRUCTIONS SEE WEIGHT AND BALANCE DATA.

FOR ADDITIONAL LOADING INSTRUCTIONS SEE WEIGHT AND BALANCE DATA.

**AEROGRAPHICS** 1405 N. PROSPECT DR. LOVELAND, CO 80538 800-336-9633

PIPER AEROSTAR **EXTERIOR** 

# JACK PAD ATTACHMENT ■ CAUTION ■

**FUEL TANK AREA** USE PROPER LENGTH SCREWS ONLY

JACK PAD ATTACHMENT CAUTION =

FUEL TANK AREA USE PROPER LENGTH SCREWS ONLY

CAUTION **USE NON-MAGNETIC FASTENERS** IN WING TIP AREA

NOSE WHEEL NOSE WHEEL TURN LIMIT

CAUTION FUEL VENT

■ WARNING ■

**CAUTION** FUEL VENT

SPRING LOADED TO DISASSEMBLE SEE MAINTENANCE MANUAL

CAUTION DO NOT PULL ON DOOR AS CRITICAL DAMAGE TO DOOR LINKAGE CAN RESULT





Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065