

Rockwell Commander 112, 114 Exterior Kit PAGE 1 of 1

PAGE 1 of 1

NOTE: Modifications and changes to accomodate your specific aircraft will be made at NO EXTRA CHARGE.

Partial kits available upon request.


IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065



AEROGRAPHICS 1405 N. PROSPECT DR. LOVELAND, CO 80538 800-336-9633

ROCKWELL 112,114 EXTERIOR KIT

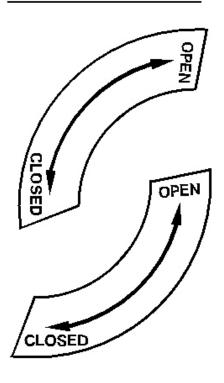


STEP, LIGHT SW PUSH ON PUSH HERE

OIL CAP. 8 QUARTS				
TEMP. F.	SAE NO.			
4BOVE 601 301 901 01 701 BELOW 10	50 4d 30 20			

EXTERNAL POWER 12 VOLTS

 SERVICING INSTRUCTIONS REMOVE AIR VALUE AND FULLY EXTEND STRUT WITH STRUT IN VERTICAL POSITION, FILL TO OVERFLOWING WITH MIL-H-5506 HYDRAULIC FLUID. FULLY COMPRESS STRUT TO REMOVE EXCESS OIL. REPLACE AIR VALVE WITH NO LOAD ON STRUT INFLATE WITH NITROGEN OF CLEAN DRY AIR TO P.S.I.G. TRE PRESS. P.S.I.G.



SE	RVICIN	G INSTRU	TION	IS
		E AND FULL		
SIRUI	WIH SIR	LIT IN VERTIC AVING WITH N	AL POS	SHION,
		I. FULLY CON		
TO REMOVE EXCESS OIL REPLACE AIR				
VALVE WITH NO LOAD ON STRUT INFLATE				
WITH NITROGEN OR CLEAN DRY AIR TO				
	1	TIRE PRESS.		ا
	P.S.I.6.	TIRE PRESS.		P.S.I.G.

GASCOLATOR DRAIN PULL TO OPERATE

STATIG AIR - KEEP GLEAN

STATIC AIR - KEEP CLEAN

FUEL 100/130 OCTANE MIN.

FUEL 100/130 OCTANE MIN. USABLE U.S. GAL.

FUEL 100/130 OCTANE MIN.

WARNING RELEASE AIR IN STRUT

RELEASE AIR IN STRUT BEFORE DISASSEMBLY

WARNING

RELEASE AIR IN STRUT BEFORE DISASSEMBLY

WARNING

RELEASE AIR IN STRUT BEFORE DISASSEMBLY

FUEL 100/130 OCTANE MIN. USABLE U.S. GAL

34 U.3. GAL