

Cessna 414 Interior Kit PAGE 1 of 1

NOTE: Modifications and changes to accomodate your specific aircraft will be made at NO EXTRA CHARGE. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065

CAUTION

PRIOR TO INITIAL USE THE OXYGEN SYSTEM SHALL BE PURGED WITH OXYGEN FOR A
PERIOF OF THE (10) MINUTES BY INSERTING MASK FITTINGS AT EACH OF THE OUTLETS AND ALLOWING THE OXYGEN TO FLOW THROUGH SLOWLY

CAUTION . WHEN REMOVING

EMERGENCY EXIT

1. TURN HANDLE OPEN 2. PULL DOOR INBD & DOWN

AFT FACING SEAT MUST BE FULL FWD WITH BACK ERECT FOR TAKEOFF & LANDING

EMERGENCY EXIT EMERGENCY EXIT

WARNING

PITOT HEATER MUST BE ON WHEN OPERATING BELOW 40°F IN INSTRUMNENT METERLOGICAL CONDITIONS

WARNING

PITOT HEATER MUST BE ON WHEN OPERATING BELOW 40°F IN INSTRUMNENT METERLOGICAL CONDITIONS

EMERGENCY EXIT



RGENCY CROSSFEED SHUTOFF VALVE PULL TO SHUTOFF











OXYGEN HIGH PRESSURE RELIEF DO NOT COVER

PARKING BRAKE TO AP

TO APPLY BRAKES, DEPRESS RUDDER PEDALS, THEN PULL KNOB. TO RELEASE PUSH IN KNOB. DO NOT DEPRESS RUDDER PEDALS.



MAXIMUM BAGGAGE ALLOWANCE 100 POUNDS (50 POUNDS/SIDE) R AIRCRAFT LOADING SEE WEIGHT & BALANCE D (SECTION V OF THE AIRCRAFT FLIGHT MANUAL)

MAXIMUM BAGGAGE ALLOWANCE 100 POUNDS (50 POUNDS/SIDE) R AIRCRAFT LOADING SEE WEIGHT & BALANCE D (SECTION V OF THE AIRCRAFT FLIGHT MANUAL)

MAXIMUM BAGGAGE ALLOWANCE 400 POUNDS (200 POUNDS/SIDE R AIRCRAFT LOADING SEE WEIGHT & BALANCE DA

MAXIMUM BAGGAGE ALLOWANCE 400 POUNDS (200 POUNDS/SIDE) R AIRCRAFT LOADING SEE WEIGHT & BALANCE DI (SECTION V OF THE AIRCRAFT FLIGHT MANUAL)

NO BAGGAGE ALLOWED FOR BAGGAGE LOADING SEE WEIGHT AND BALANCE SECTION OF OWNERS MANUAL

MAXIMUM BAGGAGE ALLAWANCE 170 POUNDS

AFT FACING SEAT BACK MUST BE

ERECT FOR TAKEOFF & LANDING AFT FACING SEAT BACK MUST BE

ERECT FOR TAKEOFF & LANDING

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING

DURING TAKEOFF & LAND DRAWER MUST BE IN STOWED POSITION

WARNING

- TO CONTINUE FLIGHT WITH AN IN-OPERATIVE ENGINE:

 GEAR AND FLAPS MUST BE RETRACTED
 INOPERATIVE ENGINE PROPELLER MUST BE FEATHERED
 AIRSPEED MUST BE MAINTAINED AT OR ABOVE BLUE

TAKEOFF AND LAND WITH AUXILIARY FUEL PUMPS LOW

SET FUEL SELECTOR VALVES TO LEFT MAIN FOR LEFT ENGINE AND RIGHT MAIN FOR RIGHT ENGINE FOR TAKEOFF. DESCENT, LANDING, AND ALL, NORMAL OPERATIONS

takeoff and land with auxiliary fuel pumps on

EMERGENCY CROSSFEED SHUTOFF VALVE MUST BE OPEN FOR ALL NORMAL OPERATIONS

100 GRADE AVIATION FUEL MINIMUM

VSO 7:







