

AeroGraphics

The Original Aircraft Lettering Company





Piper PA-28 181 Archer Exterior Kit PAGE 1 of 1

NOTE: Modifications and changes to accommodate your specific aircraft will be made at NO EXTRA CHARGE.
Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065

<p>EXT. PWR. 12 V.D.C. MASTER OFF WHEN IN USE</p>	<p>AEROGRAPHICS 1405 N. PROSPECT DR. Loveland, CO 80538</p>	<p>FUEL SUMP DRAIN</p>	<p>FUEL GRADE MIN. 100-130 AVIATION CAPACITY 17 GAL.</p>	<p>BAGGAGE DOOR SECURE PRIOR TO FLIGHT</p>
<p>STATIC VENTS KEEP CLEAN</p>	<p>PIPER 28 CHEROKEE EXTERIOR PLACARD KIT PAGE 1 OF 1</p>	<p>OIL FILL CHECK POINT INSIDE COWL</p>		<p>CAUTION TOW LIMITS</p>
<p>STATIC VENTS KEEP CLEAN</p>	<p>AVGAS ONLY GRADE 100  GRADE 100LL</p>	<p>NO STEP</p>		<p>CAUTION TOW LIMITS</p>
<p>24 U.S. GAL</p>	<p>AVGAS ONLY GRADE 100  GRADE 100LL</p>	<p>NO STEP</p>		<p>FUEL DRAIN</p>
<p>36 U.S. GAL</p>		<p>PULL TO OPEN</p>		<p>FUEL DRAIN</p>
<p>24 U.S. GAL</p>	<p>CLOSE OPEN ←————→</p>	<p>BATTERY SERVICE INSIDE COWL</p>		<p>LEVEL POINT</p>
<p>36 U.S. GAL</p>	<p>STEP HERE DOOR RELEASE →————→</p>	<p>HYD FILL INSIDE COWL</p>		<p>LEVEL POINT</p>
<p>6 QTS 8 QTS</p>		<p>LIFT DETECTOR</p>		<p>OXY FILL SEE POH</p>
<p>PILOT DRAIN</p>				<p>CHECK LATCHES</p>
<p>DOOR RELEASE ←————</p>				<p>← SECURE PRIOR TO FLIGHT →</p>
				<p>← SECURE PRIOR TO FLIGHT →</p>
<p>NO PUSH NO PUSH NO PUSH NO PUSH NO HOLD NO PUSH NO PUSH NO PUSH NO PUSH NO HOLD</p>				
<p>SERVICE INSTRUCTIONS PIPER STRUT SERIAL NO. [] EXTEND STRUT, RELEASE AIR, REMOVE OIL LEVEL PLUG, FILL SPRING STRUT WITH MIL-H-8668 HYDRAULIC OIL, COMPRESS STRUT FULLY, REPLACE PLUG, INFLATE AND MAINTAIN 2.00 INCHES VISIBLE STRUT EXTENSION UNDER STATIC LOAD.</p>	<p>SERVICE INSTRUCTIONS PIPER STRUT SERIAL NO. [] EXTEND STRUT, RELEASE AIR, REMOVE OIL LEVEL PLUG, FILL SPRING STRUT WITH MIL-H-8668 HYDRAULIC OIL, COMPRESS STRUT FULLY, REPLACE PLUG, INFLATE AND MAINTAIN 2.00 INCHES VISIBLE STRUT EXTENSION UNDER STATIC LOAD.</p>	<p>SERVICE INSTRUCTIONS PIPER STRUT SERIAL NO. [] EXTEND STRUT, RELEASE AIR, REMOVE OIL LEVEL PLUG, FILL SPRING STRUT WITH MIL-H-8668 HYDRAULIC OIL, COMPRESS STRUT FULLY, REPLACE PLUG, INFLATE AND MAINTAIN 2.00 INCHES VISIBLE STRUT EXTENSION UNDER STATIC LOAD.</p>	<p> TOW TURN LIMIT</p>	<p>E.L.T. LOCATED BEHIND PANEL</p>
<p>EXTERNAL POWER 24 VOLTS D.C. TURN MASTER SWITCH AND ALL EQUIP. OFF BEFORE INSERTING OR REMOVING PLUG</p>				
<p>WARNING: FLAP STEP UNSAFE</p>				

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065