

## Cessna Citation III Cabin Kit PAGE 1 of 6

NOTE: Modifications and changes to accomodate your specific aircraft will be made at <u>NO EXTRA CHARGE</u>. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

# Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING

TAKE-OFF AND LANDING

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

NOTE: CARE MUST BE USED IN STOWING THE OXYGEN MASK TO PREVENT KINKS IN THE HOSE REFER TO THE MAINTENANCE MANUAL CHAPTER 35 FOR PACKING PROCEDURE.

MUST BE STOWED DURING	
KE-OFF AND LANDING	

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING

TABLE

TA

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING

TABLE MUST BE STOWED DURING TAKE-OFF AND LANDING STOW TABLE FOR TAKEOFF & LANDING

STOW TABLE FOR TAKEOFF & LANDING

STOW TABLE FOR TAKEOFF & LANDING

STOW TABLE FOR TAKEOFF & LANDING PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW TABLE FOR TAKEOFF & LANDING



## Cessna Citation III Cabin Kit PAGE 2 of 6

NOTE: Modifications and changes to accomodate your specific aircraft will be made at <u>NO EXTRA CHARGE</u>. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

## Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

PUSH HANDSET DOWN TO RAISE FLITEFONE STOW FLITEFONE

**DURING TAKEOFF & LANDING** 

TO RAISE FLITEFONE

DURING TAKEOFF & LANDING

PUSH HANDSET DOWN

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

TAKEOFF AND LANDING: SEAT OUTBOARD AND BACK UPRIGHT HEADREST EXTENDED AND SHOULDER HARNESS LATCHED LIFE VEST UNDER SEAT CUSHION

 PUSH HANDSET DOWN
 PUSH HANDSET DOWN

 TO RAISE FLITEFONE
 TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING TO RAISE FLITEFONE STOW FLITEFONE DURING TAKEOFF & LANDING PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

> PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

> PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

PUSH HANDSET DOWN TO RAISE FLITEFONE

STOW FLITEFONE DURING TAKEOFF & LANDING

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065



## Cessna Citation III Cabin Kit PAGE 3 of 6

NOTE: Modifications and changes to accomodate your specific aircraft will be made at NO EXTRA CHARGE. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

#### Phone: 1-800-336-9633

#### www.aerographics.com

### Fax: 1-970-461-2065

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION **DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION **DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION **DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION **DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION **DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION **DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION LIFE VEST LIFE VEST STOWAGE ONLY STOWAGE ONLY LIFE VEST LIFE VEST STOWAGE ONLY STOWAGE ONLY

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

EMERGENCY OXYGEN BOTTLE		SH B SE SE HEA									
		V W/		бТ Е (	DN	LY				VEST VAGE	LY
		V W/		БТ Е С	DN	LY				VEST VAGE	LY
		V W/		it E (	DN	LY				VEST VAGE	LY

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT IN OUTBUP FOSTION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

> CAPACITY 5 LBS CAPACITY 5 LBS CAPACITY 5 LBS CAPACITY 5 LBS

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION SHOULDER HARNESS MUST

BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

SHOULDER HARNESS MUST BE WORN DURING TAKE-OFF AND LANDING WITH SEAT IN OUTBD POSITION SEAT IN OUTBO FOSTION SEAT BACK UPRIGHT AND HEADREST FULLY EXTENDED LIFE VEST STOWAGE-UNDER SEAT CUSHION

Phone: 1-800-336-9633

www.aerographics.com

Fax: 1-970-461-2065



## Cessna Citation III Cabin Kit PAGE41 of 6

NOTE: Modifications and changes to accomodate your specific aircraft will be made at <u>NO EXTRA CHARGE</u>. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

#### Phone: 1-800-336-9633 Fax: 1-970-461-2065 www.aerographics.com

#### **DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

WATER BARRIER INSTALLATION



PRESS REL

HYDRAULIC PRESS REL LDG GEAR EMERG HYD

TANK XFER MANUAL OVERRIDE VALVE: LDG GEAR EMERGENCY PULL T-HANDLE FUS. TANK XFER PULL KNOB ON FLOOR

ŝ

REMOVE PANEL FOR ACCESS (PUSH IN AT TOP, THEN RELEASE)

DOOR FRAME BY SNAPPING STUDS INTO RECEPTACLES BS (ON BOTTOM) PAST FLOOR LIP

SPOSA

Δ

Υ

CIGAI

PUSH IN AT TOP, THEN RELEASE RELEASE PRESSURE 2 EMERGENCY HYDRAULIC REMOVE PANEL. PULL CONTROL

> ÷ N

**NO SMOKING** 

IN LAVATORY

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

DURING TAKEOFF & LANDING DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

**DURING TAKEOFF & LANDING** DRAWER MUST BE IN STOWED POSITION

VATER BARRIER INSIDE

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING LIFE VEST STOWAGE

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING LIFE VEST STOWAGE

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE

FUEL TANK XFER VALVE MANUAL OVERRIDE

1. REMOVE PANEL. (PUSH IN AT TOP, THEN RELEASE) 2. PULL CONTROL. (RED LABELED T-HANDLE)

PULL то CLOSE

LIFE VEST STOWAGE SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE IN SEAT DRAWER

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE IN SEAT DRAWER



## Cessna Citation III Cabin Kit PAGE 5 of 6

NOTE: Modifications and changes to accomodate your specific aircraft will be made at <u>NO EXTRA CHARGE</u>. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633

## www.aerographics.com

### Fax: 1-970-461-2065

FIRE EXTINGUISHER 9 9 9

INDIRECT LIGHTING POWER SUPPLY PROVIDES POWER TO UPPER FORWARD RH LAMPS

INDIRECT LIGHTING POWER SUPPLY PROVIDES POWER TO UPPER FORWARD RH LAMPS

INDIRECT LIGHTING POWER SUPPLY PROVIDES POWER TO UPPER FORWARD RH LAMPS

INDIRECT LIGHTING POWER SUPPLY PROVIDES POWER TO

UPPER FORWARD RH LAMPS

INDIRECT LIGHTING POWER SUPPLY PROVIDES POWER TO UPPER FORWARD RH LAMPS

CAPACITY 15 LBS

CAPACITY 20 LBS CAPACITY 10 LBS

MAX. Contained weight 40 LBS.
<b>CIGARETTE DISPOSAL</b>
<b>CIGARETTE DISPOSAL</b>
<b>CIGARETTE DISPOSAL</b>

**\_ATCH SLIDING DOORS OPEN** FOR TAKEOFF AND LANDING

ATCH SLIDING DOORS OPEN FOR TAKEOFF AND LANDING

**CLOSE ALL CABINET DOORS** 

& DRAWERS DURING TAXI,

TAKEOFF AND LANDING

**CLOSE ALL CABINET DOORS** 

& DRAWERS DURING TAXI,

TAKEOFF AND LANDING

**CLOSE ALL CABINET DOORS** 

& DRAWERS DURING TAXI,

TAKEOFF AND LANDING

TRASH CONTAINER

NO CIGARETTE DISPOSAL

TRASH CONTAINER

NO CIGARETTE DISPOSAL

TRASH CONTAINER

NO CIGARETTE DISPOSAL

**DURING TAXI, TAKEOFF &** LANDING ALL BAR DOORS

TO BE CLOSED

RTAIN MUST IN STOWED STITON PRIOR STITON PRIOR TAXI AND EMAIN STOWED DURING FLGHT, LANDING AND TAXI. . Detach 3tain From D and Aft Snaps URE WITH STRAP STOW 2. SECUI IN PLACE 1 PROVIDED S 23

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE BEHIND TOILET FRONT PANEL

TOILET CHEMICAL IS CORROSIVE USE EXTREME CARE TO PREVENT SPILLAGE FOLLOW SERVICING INSTRUCTIONS CAREFULLY CLEAN ANY SPILLAGE IMMEDIATELY AND REPORT IT TO THE CREW

SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING

LIFE VEST STOWAGE BEHIND TOILET FRONT PANEL

DOOR MUST BE OPEN FOR TAKEOFF, LANDING, AND ALL OTHER TIMES TOILET IS NOT IN USE

LH ANTI-SKID VALVES

**RH ANTI-SKID VALVES** 

PARKING BRAKE VALVE


SHOULDER HARNESS MUST BE WORN DURING TAKEOFF AND LANDING LIFE VEST STOWAGE INSIDE CLOSET SLIDING DOORS MUST BE LATCHED OPEN FOR TAKEOFF AND LANDING OXYGEN MASK STORAGE OXYGEN MASK STORAGE SLIDING DOORS MUST BE LATCHED OPEN FOR TAKEOFF AND LANDING

ASSURE VCR/TV POWER OFF **BEFORE CLOSING DOOR** 

THIS SIDE THIS SIDE UP DOWN

CAUTION: CURTAIN MUST BE REMOVED AND STOWED PRIOR TO TAXI & REMAIN STOWED DURING FLIGHT, LANDING & TAXI DOWN BRT OFF BRT OFF TRASH CONTAINER DIM DIM

FOOTWELL LIGHT SWITCH OVERHEAD

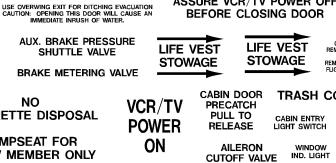

USE OVERWING EXIT FOR PRIMARY DITCHING EVACUATION CAUTION: OPENING THIS DOOR WILL CAUSE AN IMMEDIATE INRUSH OF WATER, UNLESS WATER BARRIER IS INSTALLED

VCR TO BE STOWED WITH TAMBOUR DOOR LOWERED WHILE IN USE

PULL RING TO RELEASE BACK

**CIGARETTE DISPOSAL** JUMPSEAT FOR

**CREW MEMBER ONLY** 

Phone: 1-800-336-9633

www.aerographics.com

Fax: 1-970-461-2065




Cessna Citation III Cabin Kit PAGE 6 of 6

NOTE: Modifications and changes to accomodate your specific aircraft will be made at <u>NO EXTRA CHARGE</u>. Partial kits available upon request.

IF YOU HAVE ANY QUESTIONS PLEASE CALL!

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065

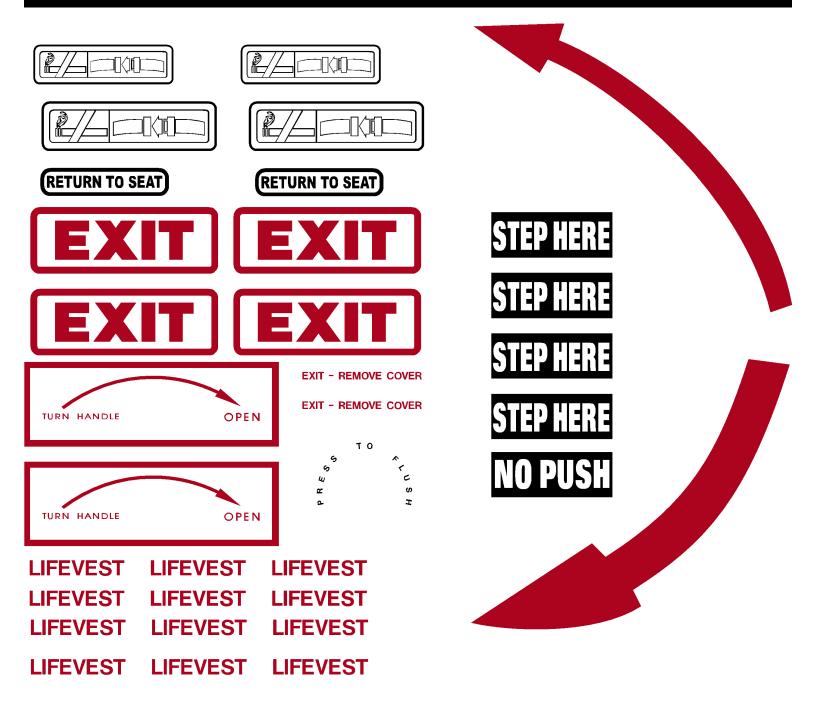

Phone: 1-800-336-9633 www.aerographics.com Fax: 1-970-461-2065